


NWCo

Wiertła centrujące

Spotting drills

NC-Anbohrer

Свёрла для зацентровки

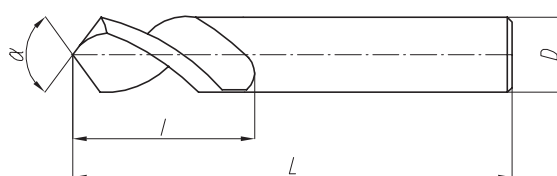

D (h6)	L	l	HSS		HSS	
			$\alpha - 90^\circ$		$\alpha - 120^\circ$	
			Code No 0641-230-		Code No 0641-230-	
3	50	10	035102	●	045104	●
4	55	15	035204	●	045206	●
5	60	15	035306	●	045308	●
6	65	20	035408	●	045400	●
8	80	25	035601	●	045501	●
10	90	25	035805	●	045603	●
12	100	30	035907	●	045705	●
14	115	35	036001	●	045807	●
16	115	35	036103	●	045909	●
18	130	40	036205	●	046003	●
20	130	40	036307	●	046105	●
25	140	45	036409	●	046207	●