

DIN 851 AA/AB


H

Frezy do rowków teowych

T-slot cutters

Schaftfräser für t-Nuten, Zylinderschaft

Фрезы для т-образных пазов

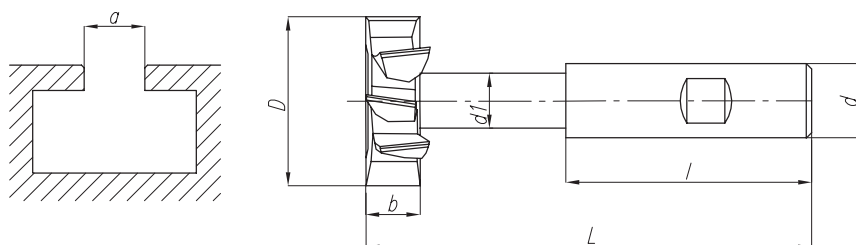

DIN
851
AA/AB

Z=6÷12

$\lambda=10^{\circ}\pm 12^{\circ}$
 $\gamma=12^{\circ}$

Form AA – chwyt walcowy / plain shank / Zylinderschaft / плоский хвостовик

D (d11)	d (h8)	d1 (h12)	L	l	b (d11)	a	z	HSS	
								Code No 0641-599-	
11	10	4	53.5	40	3.5	5	6	150105	●
12.5	10	5	57	40	6	6	6	150207	●
16	10	7	62	40	8	8	6	150309	●
18	12	8	70	45	8	10	6	150400	●
19	12	8	71	45	9	10	6	150467	●
21	12	10	74	45	9	12	8	150502	●
22	12	10	75	45	10	12	8	150543	●
25	16	12	82	48	11	14	8	150604	●
28	16	13	85	48	12	16	8	150645	●
32	16	15	90	48	14	18	8	150706	●
36	25	17	103	56	16	20	10	151004	●
40	25	19	108	56	18	22	10	155008	●
45	25	21	113	56	20	24	10	159001	●
50	32	25	124	60	22	28	12	164005	●
56	32	28	130	60	24	32	12	164107	○
60	32	30	139	60	28	36	12	164209	○

Form AB – chwyt walcowy z płaską / flatted shank / Zylinderschaft mit Mitnahmefläche / хвостовик с лыской

D (d11)	d (h8)	d1 (h12)	L	l	b (d11)	a	z	HSS	
								Code No 0641-599-	
11	10	4	53.5	40	3.5	5	6	164211	○
12.5	10	5	57	40	6	6	6	164243	○
16	10	7	62	40	8	8	6	164302	○
18	12	8	70	45	8	10	6	164404	○
19	12	8	71	45	9	10	6	164506	○
21	12	10	74	45	9	12	8	164608	○
22	12	10	75	45	10	12	8	164700	○
25	16	12	82	48	11	14	8	164801	○
28	16	13	85	48	12	16	8	164903	○
32	16	15	90	48	14	18	8	165008	○
36	25	17	103	56	16	20	10	165100	○
40	25	19	108	56	18	22	10	165201	○
45	25	21	113	56	20	24	10	165303	○
50	32	25	124	60	22	28	12	165405	○
56	32	28	130	60	24	32	12	165507	○
60	32	30	139	60	28	36	12	165609	○