


DIN 851 BN

Frezy do rowków teowych


T-slot cutters, with Morse taper shank

Schafffräser für t-Nuten, Morsekegel

Фрезы для т-образных пазов

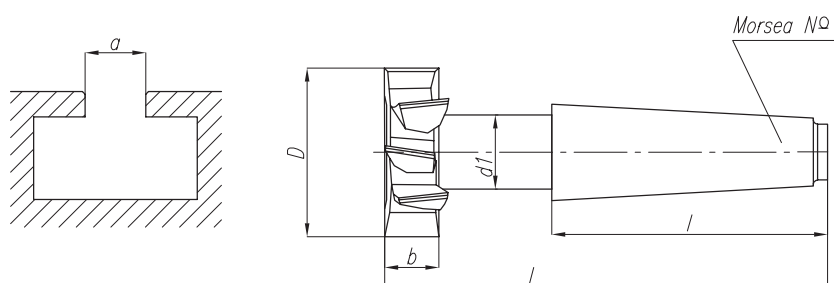

H

DIN 851 BN	Z=6+12	$\lambda=10^{\circ}\pm 12^{\circ}$ $\gamma=12^{\circ}$	 DIN 228 A
-----------------------	---------------	---	--

chwyt Morse 'a' / Morse taper shank / Morsekegel / хвостовик типа „конус Морзе“

D (d11)	d1 (h12)	L	l	b (d11)	a	Morse taper No	z	HSS	
								Code No 0641-599-	
12.5	5	78	57	6	6	1	6	220108	●
16	7	82	57	8	8	1	6	220200	●
18	8	82	57	8	10	1	6	220301	●
19	8	83	57	9	10	1	6	220342	○
21	10	102	69	9	12	2	8	220403	●
22	10	102	69	10	12	2	8	220457	●
25	12	104	69	11	14	2	8	220505	●
28	13	106	69	12	16	2	8	220546	●
32	15	111	69	14	18	2	8	220607	●
36	17	133	86	16	20	3	10	220650	●
40	19	140	86	18	22	3	10	220709	●
45	21	143	86	20	24	3	10	220740	●
50	25	187	109	22	28	4	12	220800	●
56	28	192	109	24	32	4	12	220901	○
60	30	201	109	28	36	4	12	221006	○
72	36	248	136	35	42	5	12	221108	○
85	42	255	136	40	48	5	12	221200	○
95	44	264	136	44	54	5	12	221301	○