


DIN 334-D • DIN 335-D


Pogłębiacze trzyostrzowe z chwytym Morse'a

3-flute countersinks Morse taper shank


Kegelsenker, 3-Schneiden, Morsekegel

Зенковки 3-х перьевые с хвостовиком типа "конус Морзе"

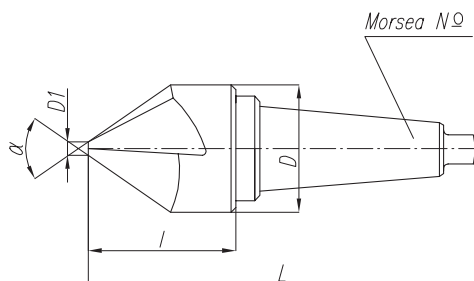

DIN 334-D	Z=3	α=60°	 DIN 228 A
------------------	------------	--------------	--

D (z9)	D1	Morse taper No	L	l	z	α	HSS		HSS-E	
							Code No 0641-261-		Code No 0641-261-	
16	4	1	90	14	3	60°	043101	○	044102	○
20	5	2	106	17	3	60°	043203	●	044204	○
25	6.3	2	112	20	3	60°	043305	●	044306	○
31.5	10	2	118	22.4	3	60°	043407	●	044408	○
40	12.5	3	150	28	3	60°	043509	●	044500	○
50	16	3	160	35.5	3	60°	043600	●	044601	○
63	20	4	190	42.5	3	60°	043702	●	044703	○
80	25	4	200	53	3	60°	043804	○	044805	○

DIN 335-D	Z=3	α=90°	 DIN 228 A
------------------	------------	--------------	---

D (z9)	D1	Morse taper No	L	l	z	α	HSS		HSS-E	
							Code No 0641-261-		Code No 0641-261-	
15	3.2	1	85	10	3	90°	050105	●	063105	○
16.5	3.2	1	85	11	3	90°	050207	●	063207	○
19	3.5	2	100	12	3	90°	050309	●	063309	○
20.5	3.5	2	100	13	3	90°	050400	●	063400	○
23	3.8	2	106	14	3	90°	050502	●	063502	○
25	3.8	2	106	16	3	90°	050604	●	063604	○
26	3.8	2	106	16	3	90°	050706	○	063706	○
28	4	2	112	17	3	90°	050808	○	063808	○
30	4.2	2	112	19	3	90°	050900	●	063900	○
31	4.2	2	112	19	3	90°	051004	●	064004	○
34	4.5	2	118	20	3	90°	051106	●	064106	○
37	4.8	2	118	22	3	90°	051208	●	064208	○
40	10	3	140	21	3	90°	051300	●	064300	○
50	14	3	150	24.5	3	90°	051401	●	064401	○
63	16	4	180	29	3	90°	051503	●	064503	○
80	22	4	190	36.5	3	90°	051605	●	064605	○